




# COLLAPSIBLE LOCKING BOLLARD INSTALLATION



**1.** Drill four holes into ground surface through baseplate for alignment.

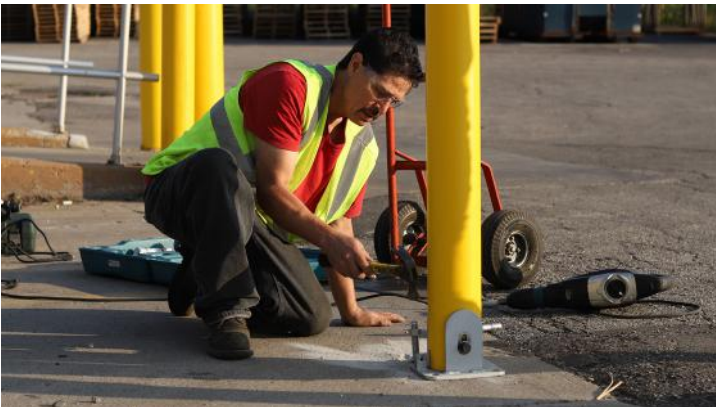

**2.** Hit anchors into place with hammer.



**3.** Tighten anchors with wrench.



**4.** Lock bollard after installation.





# COLLAPSIBLE LOCKING BOLLARD APPLICATION



**1.** Unlock bollard.



**2.** Lift bollard approximately 1”.



**3.** Slowly lower bollard to resting position.